

AVCATT Configurations


Each Manned Module has:

- **Main Instrument Panel (MIP), qty 5**
 - AH-64D
 - UH-60A/L
 - UH-60M
 - CH-47F
 - OH-58D
- **Center Console, qty 3**
 - Unit 1 - side A – AH-64D, side B – UH-60M
 - Unit 2 – side A – OH-58D, side B – UH-60A/L
 - Unit 3 - side A – CH-47F, side B blank
- **Overhead Console, qty 3**
 - Unit A - UH-60A/L - CH-47D – OH-58D
 - Unit B - UH-60M
 - Unit C - CH-47F
- **Side consoles**
 - AH-64D
- **TEDAC**
 - AH-64D
- **Cyclic/Collective**
 - Two each, total quantity ten – AH-64D, UH-60A/L, UH-60M, CH-47F, OH-58D

Main Instrument Panel Storage



- Located above flat panel displays
- Storage space for five Main Instrument Panels

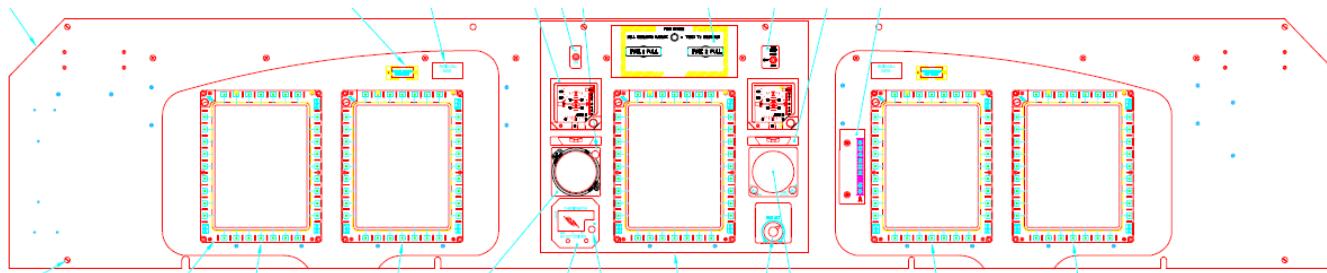

Under Floor Storage

Storage under MM compartment floor for
two center consoles and side panel




Cyclic/Collective Storage


Manned Module Cyclic/Collective storage space, 6 each



Overflow Cyclic/Collective in-cabinet storage , Manned Module host equipment rack two locations


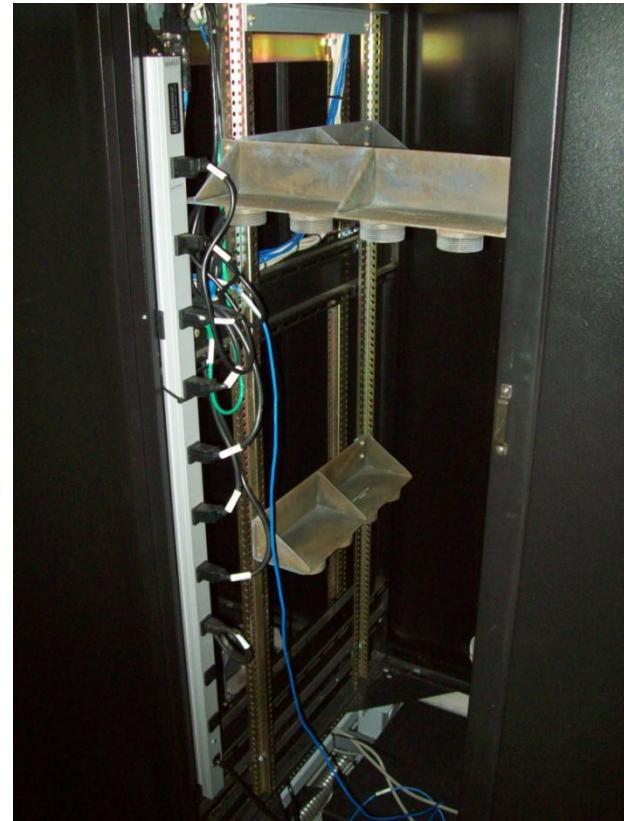


Reconfigurable Overhead Panel

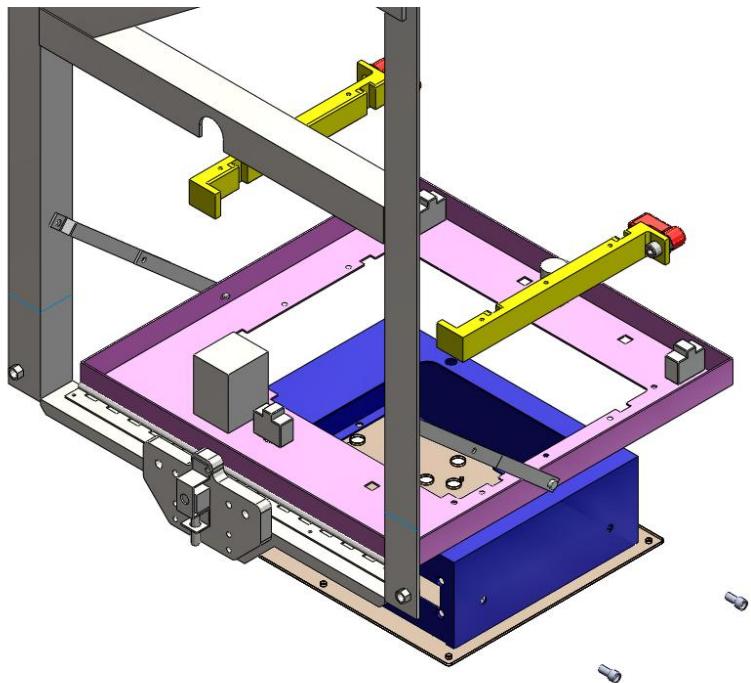

Overhead Panel Storage

Storage for two overhead panels
below Main Instrument Panel

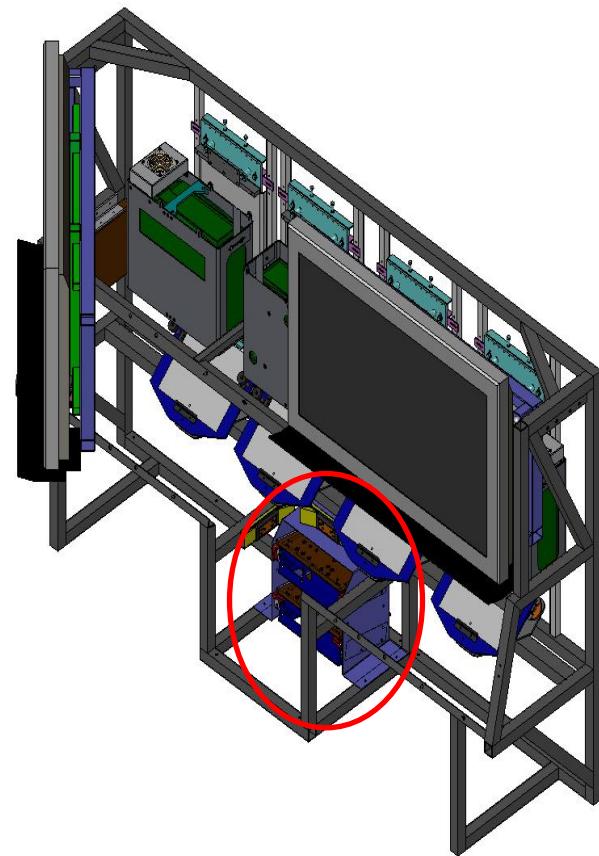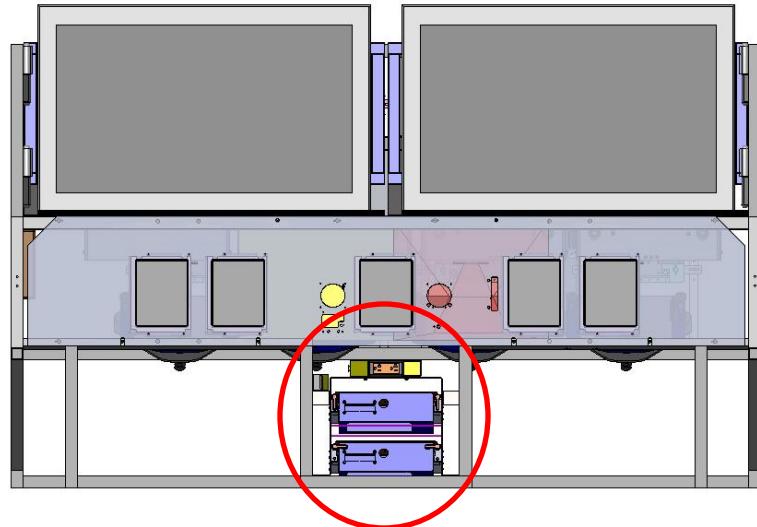

Hardware Location

Manned Module configured as CH-47F

- **Main Instrument Panel**
 - AH-64D – storage slot1
 - UH-60A/L – storage slot 2
 - UH-60M – storage slot 3
 - OH-58D – storage slot 4
 - Storage slot 5 empty
 - CH-47F installed on MM
- **Center Console**
 - Unit 1 - AH-64D, UH-60M stowed below floor
 - Unit 2 – OH-58D, UH-60A/L stowed below floor
 - Unit 3 - CH-47F installed on MM
- **Overhead Console**
 - Unit A - UH-60A/L - CH-47D – OH-58D in storage
 - Unit B - UH-60M in storage
 - Unit C - CH-47F installed on MM
- **Side consoles**
 - Installed on MM, covered
- **TEDAC**
 - stored
- **Cyclic/Collective**
 - CH-47F - two each installed on Manned Module
 - Remaining 16 in storage on MM wall and in overflow location – AH-64D, UH-60A/L, UH-60M, OH-58D

Note: All hardware is stored within the AAR and BMC trailers